 
 



RETUNING YOUR UEC RECEIVER

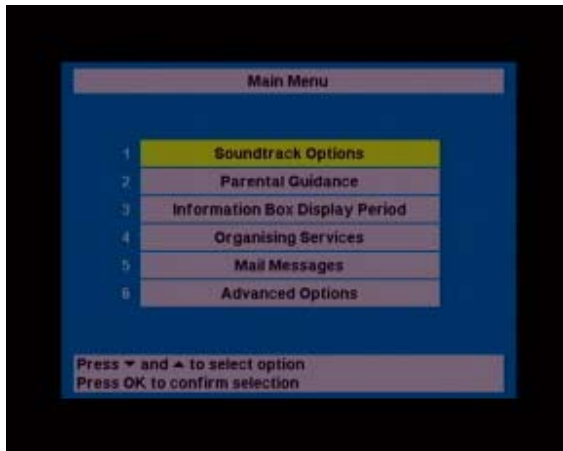


STEP 1
On the UEC Remote press “Menu” button. The Main Menu screen come up.

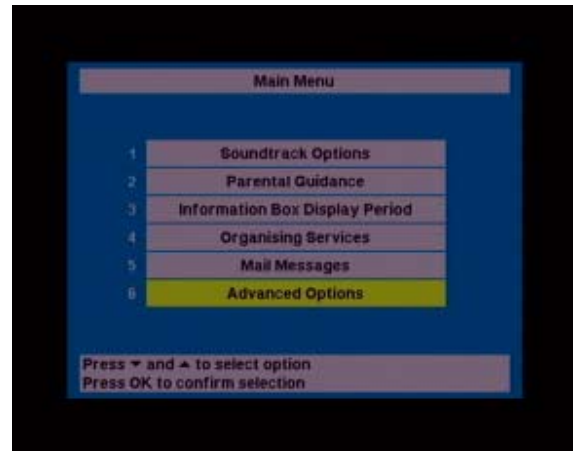

 
STEP 2
Using the down arrow key on the remote control select Advanced Options and Press OK

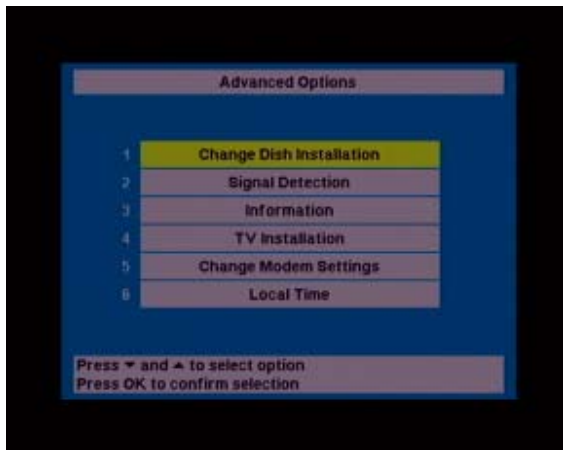


STEP 3
The Advanced options Menu opens up. Select Change Dish Installation and Press OK

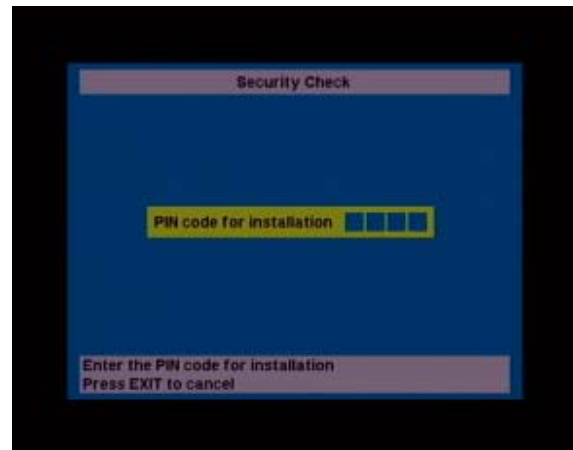

 
STEP 4
It shall ask for PIN
Enter the digits 9 9 4 9 using number pad on the remote control

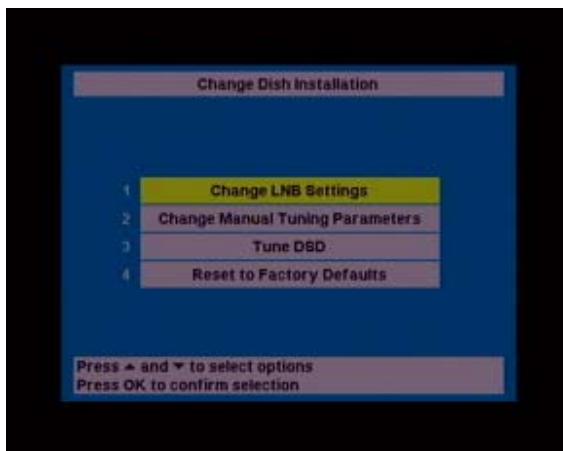


STEP 5
“Change Dish Installation” Menu opens up

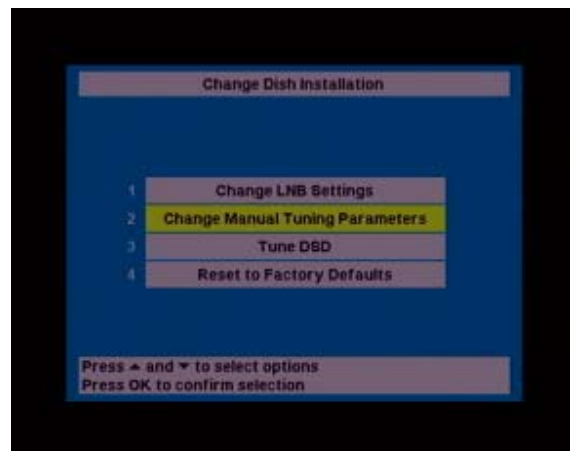

 
STEP 6
Go to “Change Manual Tuning Parameters” and press OK

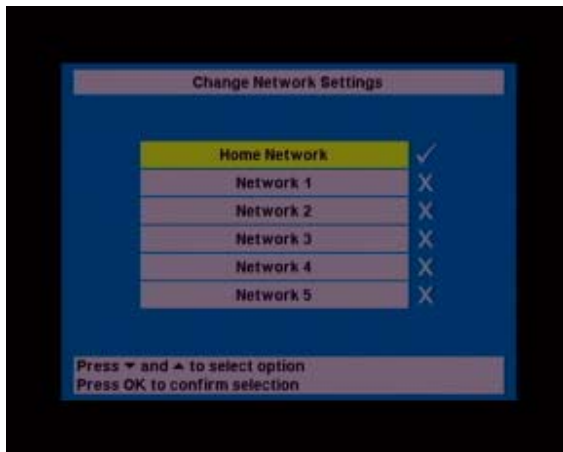


STEP 7
Go to Home Network and press OK

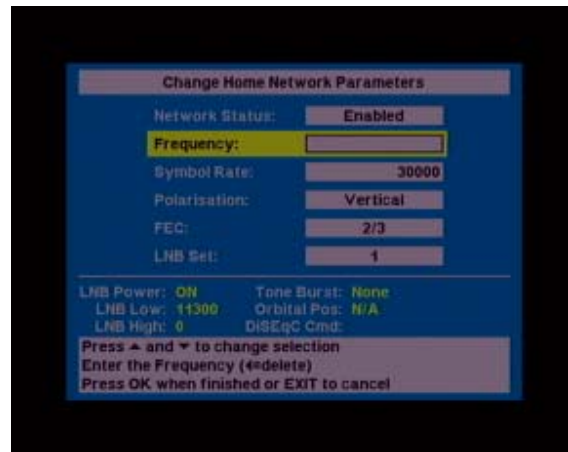


STEP 8
Ensure Network Status is set to Enabled. Go to Frequency and using left arrow key on remote blank out the earlier frequency

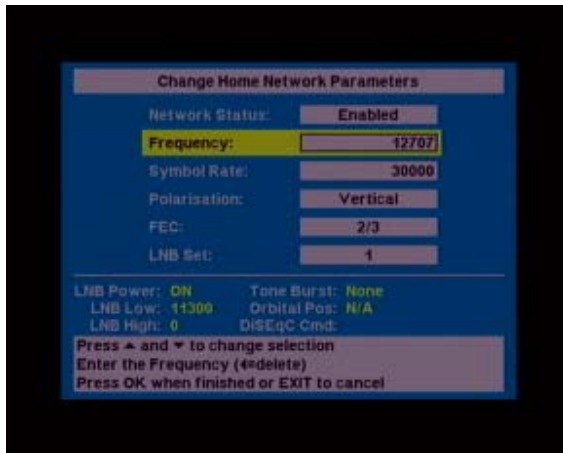


STEP 11
In the Frequency type 1 2 7 0 6

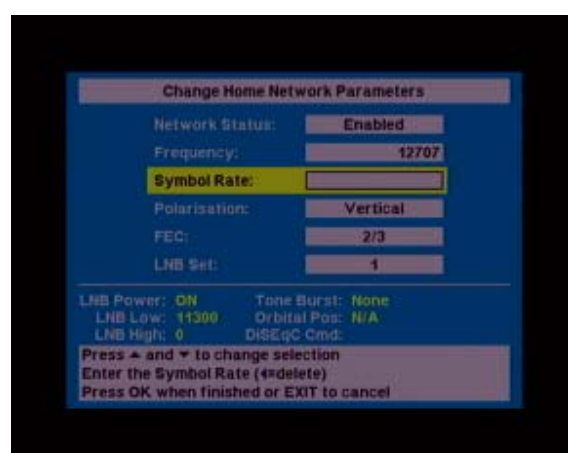

 
STEP 12
Go to Symbol rate. Using left arrow key blank/delete the previous number

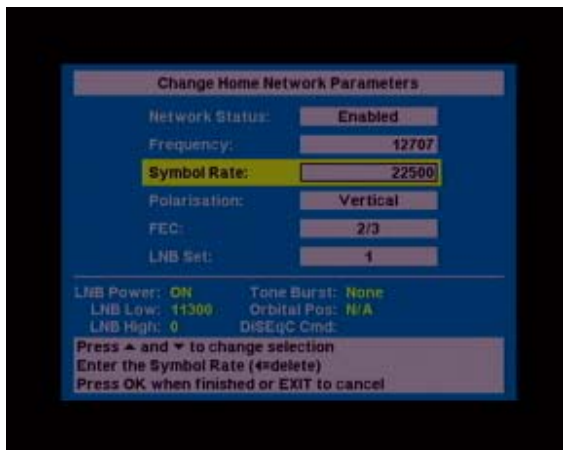


STEP 13
In Symbol Rate type 2 2 5 0 0

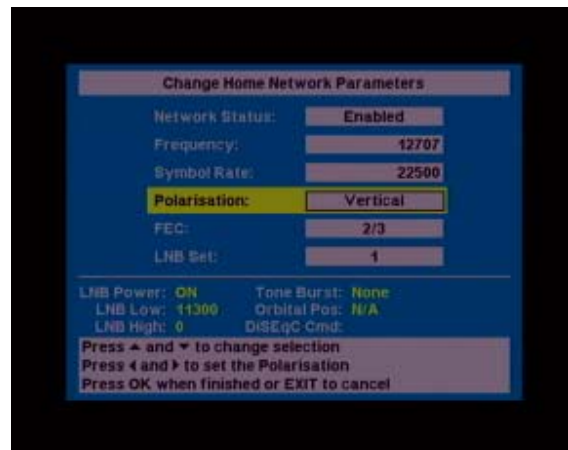

 
STEP 14
Change Polarisation to vertical using left or right arrow key

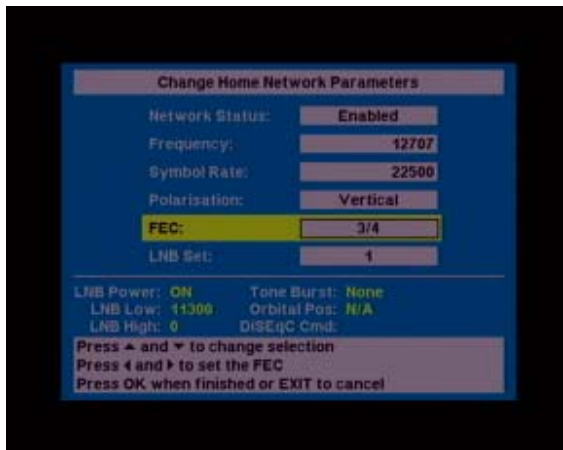

 
STEP 15
Change FEC to 3 / 4 and PRESS OK

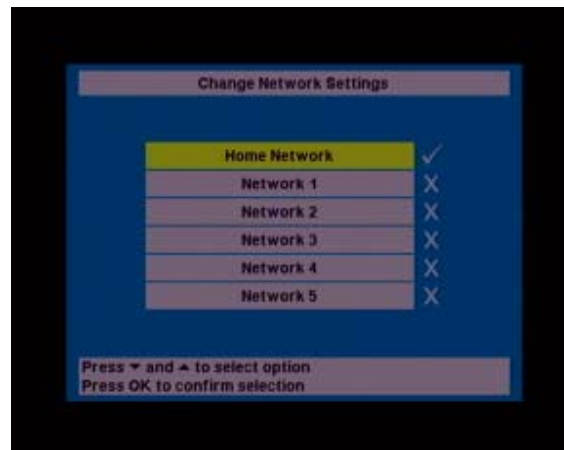

 
STEP 16
The screen goes back to Change Network Settings. Press EXIT

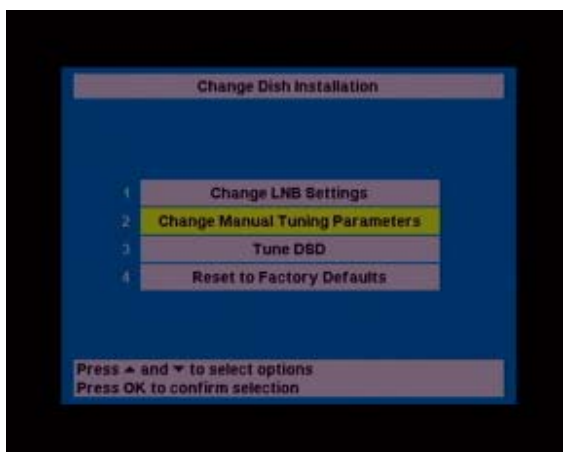

 STEP 17
The Change Dish Installation Menu opens up

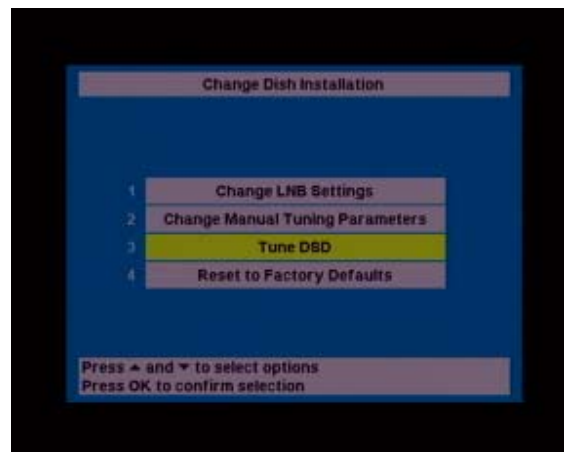

STEP 18
Go down to Tune DSD and Press OK

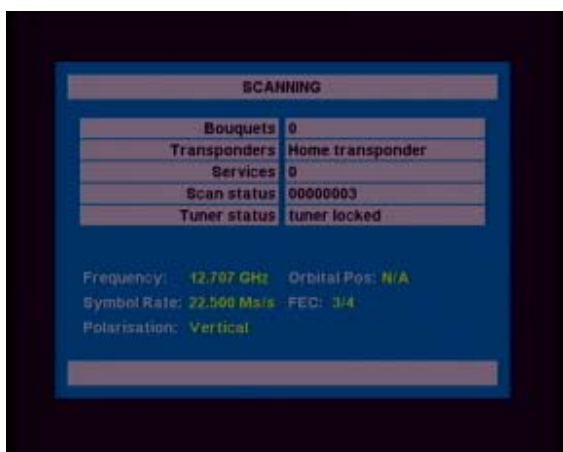

STEP 19
The decoder scans for new services. Press Exit till you go to channel on the screen. Scroll channel to go to your favourite channel.



STEP 20
After scanning Exit the screen and scroll to the desired channel
Scroll to your favourite channel (Using Remote control do channel up). Please note after the scanning the STU may store previous list of channels in their current channel position and the new channel list added to it. Please scroll through all channels